




MODEL SC412A


Assembly instructions for telescopic wands

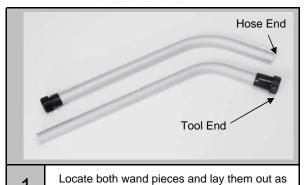



pictured in this photograph

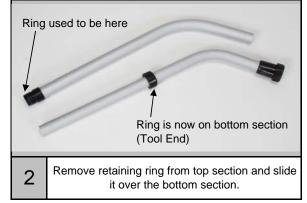

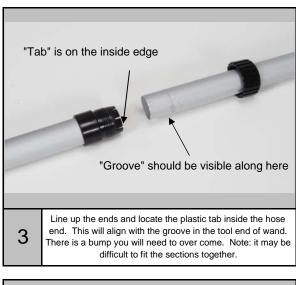

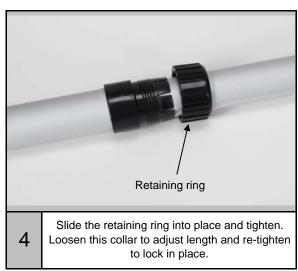

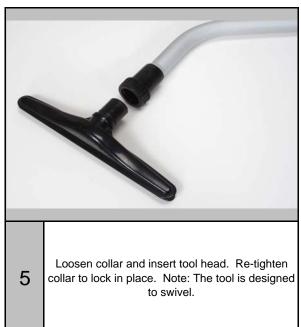

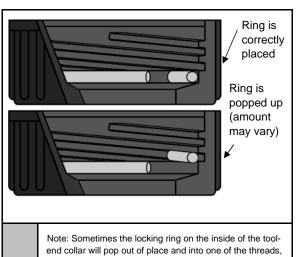

Note: Sometimes the locking ring on the inside of the toolend collar will pop out of place and into one of the threads, preventing the collar from closing all the way. If this happens, the tools will fall out and the collar wont tighten all the way. Push the ring down and out of the threads to remedy. When properly placed and the collar is tightened, the two ends of the rings should touch each other. Above is a cutaway illustration of the collar.